



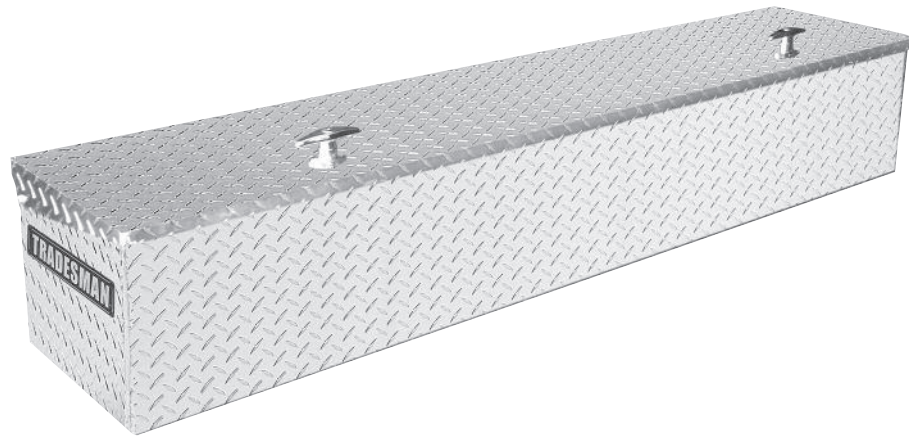

TALFMSB/BK 48, 60, 70



- 1) Locate box in desired position on left or right side bed rail.
- 2) Bolt box to bed side rail flange.
- 3) Place adjustable support screw (Leveler) in each end of box with non scratch pad toward bed side.
- 4) Adjust screw length to support box.

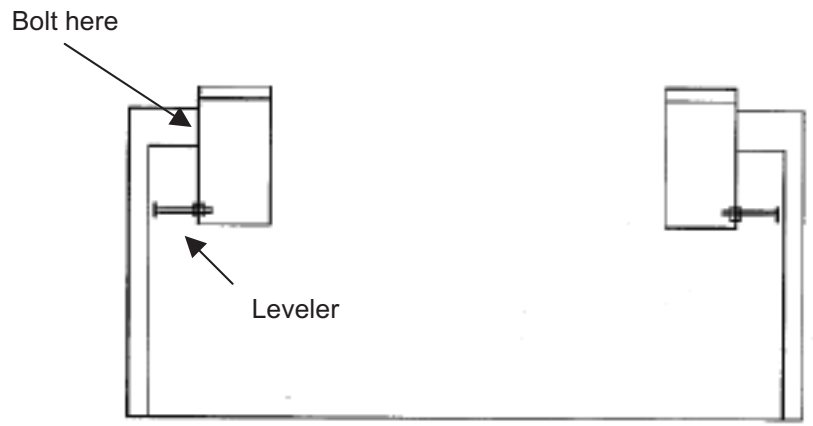

Rear view of truck bed