



TRADESMAN[®]

TALFWGB60/BK
TALFWGB53/BK

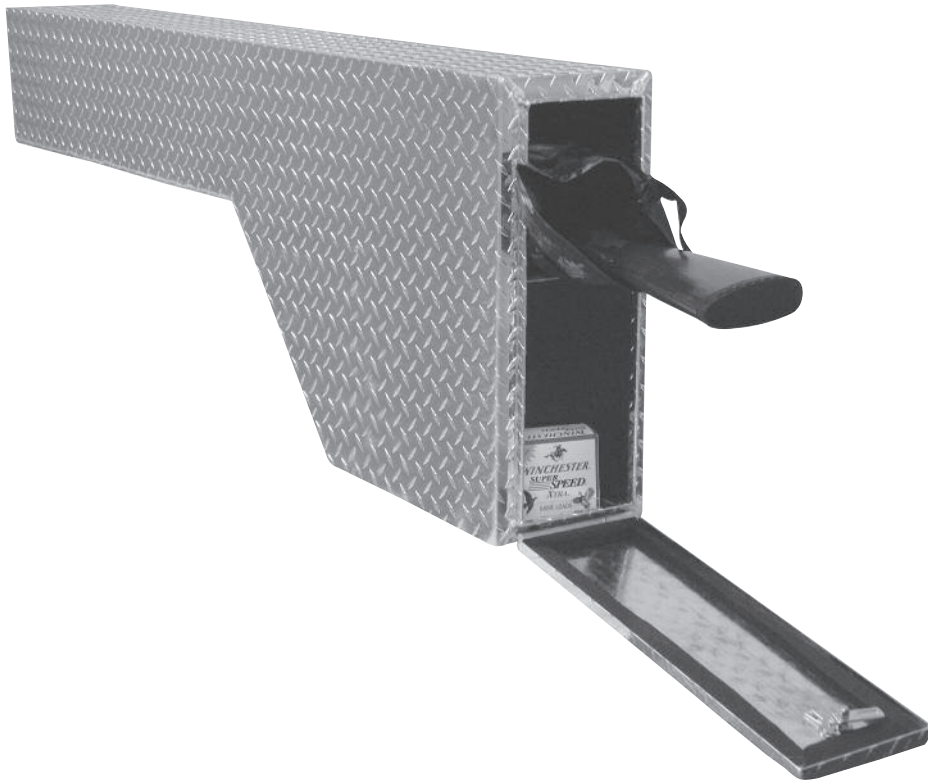

- 1) Locate box in desired position behind left or right fenderwell, making sure door will open freely.
- 2) Attach front of box with included bracket.
- 3) Attach back of box with bolts and/or screws.

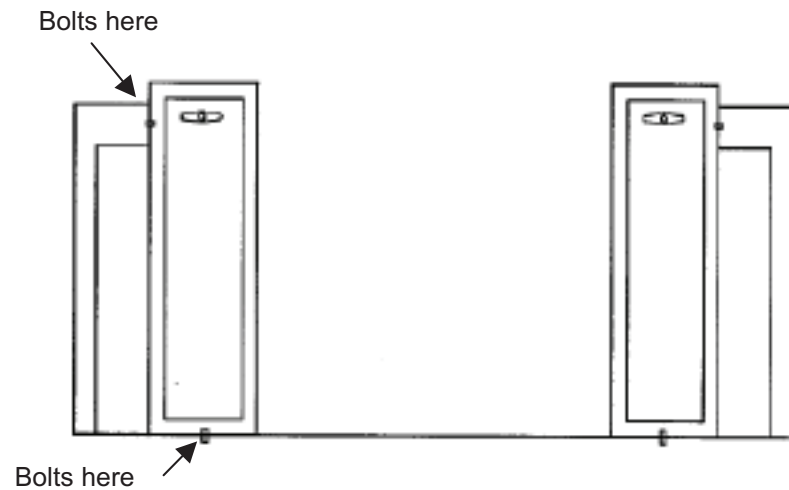

Rear view of truck bed