


TRADESMAN®

TAL 480, 600, 700/BK
TST 480, 700/BK

- 1) Locate box on left or right side of bed rail.
- 2) Drill and bolt box to rail.
- 3) Drill and bolt support bracket to box and bed side.

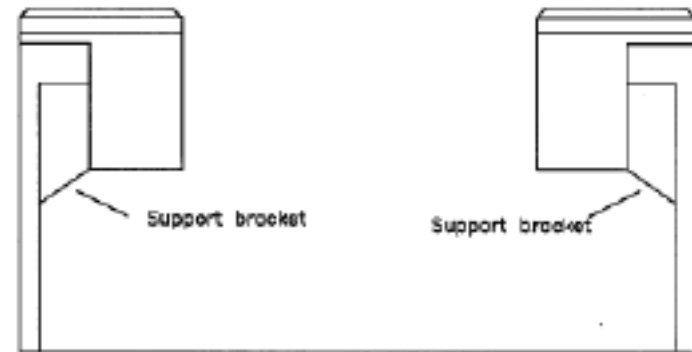

Rear view of truck bed