


TRADESMAN®

TALTM 48, 60, 72, 90, 96

TALPTM 72, 90, 96

TSTM 48, 60, 72, 90

- 1) Locate Top Mount Box in desired position.
- 2) Drill holes in bottom of box and bed side rail. Attach with 3/8" bolts, nuts and washers.
- 3) Locate rear stabilizer bracket (included in the box).
- 4) Attach bracket to back of box and bed floor.

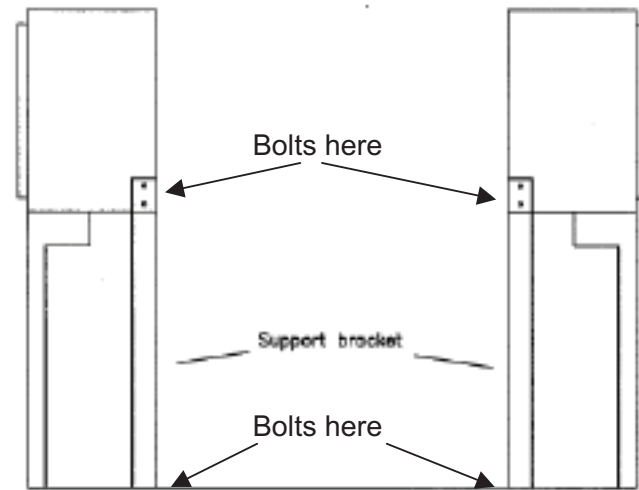

Rear view of truck bed